VINTEC

User Manual

VWS83OFCB-X
VWS83OFAS-X

vintec.com

VINTEC

Table of Contents

WARNING 3

INSTALLATION 4

STORAGE 5

OPERATION 6

WINE SERVING & DEFROSTING &ADJUSTABLE SHELVES 7

DOOR REVERSAL & HOW TO REPLACE THE CHARCOAL FILTER 8

TROUBLESHOOTING 9

TROUBLESHOOTING & DATA 10

Important Information that may impact your Manufacturer's Warranty



Some models are available in dedicated countries only.

manual.

This appliance is not intended for storing food of any sort.

Children should be supervised to ensure they do not play

not be made by children without supervision .

Children should be supervised to ensure that they do not play with the appliance.

R600A WARNINGS

VWS830FCB-X/VWS830FAS-X

appliances.

appliance.

It is hazardous for anyone other than an Authorised Service Person to carry out servicing or repairs to this **appliance.**

– WARNING: Do not use mechanical devices or other

– WARNING: Do not use electrical appliances inside the compartments.

– WARNING: Do not store explosive substances such as

appliance.

– WARNING: This appliance is intended to be used in

environments;

– WARNING: Do not use electrical appliances inside the

appliance.

appliance.

Allow 24 hours before switching on the Wine Cellar . you leave the door open to clear any residual odours.

- have a standard and reliable electricity supply (standard . It is lead;

The Wine Cellar should be placed on a level surface in a dry, well-ventilated room(max.75% relative air humidity).in hot humid climate areas and particularly on hot rainy days,humidity in the ambient air can condense on the cold external sur door or door as et s when appliance is set at the coldest temperature setting in a long period of time during high humid days which is a natural phenomenon. During monsoon season or high humidity days, we recommend setting the temperature at warmer or at cellaring temperature mode. Or you can simply wipe off any moisture or water droplets with soft dry cloth. Condensation will disappear when humidity level drops or temperature set to a warmer setting.

temperature may not be reached. (See Climate Class

electrical outlet.

Note:

INSTALLATION

is accessible. Release the power cord.


installed in a suitable place where the compressor will

Levelling your Wine Cellar : Wine facilitate easy leveling.

VINTEC

Fixing the Back spacer:

INSTALLATION OF BACK SPACER

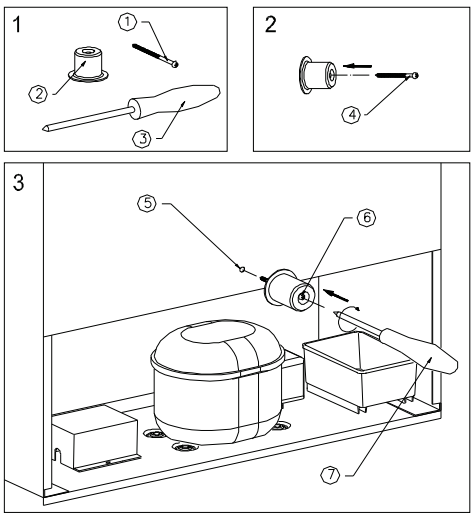

TURNING ON YOUR WINE CELLAR PLUG IN AND SWITCH on the cellar by pressing on the power button for a few seconds.
When you use the Wine Cellar for the first time (or restart the Wine Cellar after having it shut off for a long time), there
will be a few degrees variance between the temperature. Once the Wine Cellar and Beverage Centre is running for a few hours everything will
stabilise.

OPERATING NOISES

To reach the desired temperature settings, VINTEC Wine Cellar , like all Wine Cellar and may produce the following types of noises. These noises are normal and may occur as follows:

- Gurgling sound - caused by the refrigerant flowing through the appliance's coils.
- Cracking/popping sounds - resulting from the contraction and expansion of the refrigerant gas to produce cold.
- Fan operating sound - to circulate the air within the Wine Cellar.

An individual's perception of noise is directly linked to the environment in which the Wine Cellar is located, as well the specific type of models. VINTEC Wine Cellar are in line with international standards for such appliances. VINTEC will always do its utmost to satisfy its customers but will not retake possession of the goods due to complaints based on normal operating noise occurrences.

LOADING YOUR WINE CELLAR

You may load your wine bottles in single or double rows while taking note of the following: if you do not have enough bottles to fill your Wine Cellar , it is better to distribute the load throughout the Wine Cellar so as to avoid all on top or all below type loads.

- Do remove or relocate adjustable wooden shelves to accommodate larger type of bottles or increase the capacity of the cellar by stacking the bottles up when necessary. (See removing shelves).
- Keep smalls gap between the walls and the bottles to allow air circulation. Like an underground cellar air circulation is important to prevent mould and for a better homogeneous temperature within the cellar.

- Do not over load your Wine Cellar and to facilitate air circulation.
- Do not stack more than 1.5 rows of standard 0.75L bottles per shelves to facilitate air circulation.
- Avoid obstructing the internal fans (Located inside on the back panel of the Wine Cellar).
- Do not slide the shelves outwards beyond the fixed position to prevent the bottles from falling.
- Do not pull out more than one loaded shelf at a time as this may cause the Wine Cellar to tilt forward.

- Do not cover the wooden shelves with alloy foil or other materials, as it will obstruct air circulation.
- Do not move your Wine Cellar while it is loaded with wines. This might distort the body of the Wine Cellar and cause back injury.

TYPES OF REGULATION

Please note that depending on the loading and settings chosen it takes about 24 hours for the Wine Cellar to see the temperature stabilising. It is normal and this process occurs whenever the setting is modified and/or whenever a large amount of bottles are added to the cellar. Designed to store and mature all wines: red, white and sparkling. These Wine Cellar reproduce the ideal conditions for wine storage, at a constant recommended temperature of 12°C. They can also be set to provide ideal serving temperature for full enjoyment of the wine's qualities. Unless stated by the wine maker on the bottle, VINTEC recommends 7°C for your champagne, 12°C for whites and 18°C for reds. (Refer to Wine Service Temperature recommendation chart). Designed to store wines at the correct temperature for best enjoyment. The chamber can hold 35 bottles, at a temperature of 6°C to 10°C dedicated mainly to white, sparkling wines and champagnes. mainly for red wines, which could be stored either at room temperature (18°C-20°C) for consumption or at 12°C for a longer time of storage.

TEMPERATURE SETTINGS


This appliance memorizes and saves its set temperature. In case of a power outage, the unit adjusts to its previous temperature setting when power resumes.

Factory preset chart

Model	Setting	Temperature divation
VWS830FCB-X	12°C	+/-2.5°C
VWS830FAS-X	12 °C	+/-2.5°C

Storage diagram

FOR VWS830FCB-X/VWS830FAS-X,

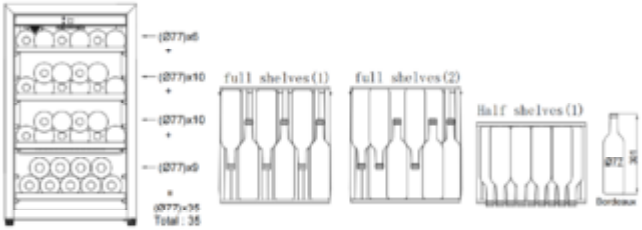


between the air temperature inside the Wine Cellar

e

will maintain the temperature inside the Wine

Control panel of models

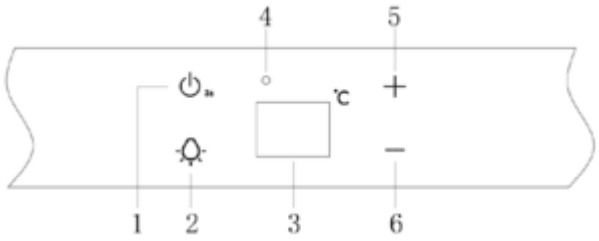

1.“ ⏻ ” button
To control this unit’s power,ON/OFF.(Press 1 second to turn on, 3 seconds to turn off).

2.“ ☼ ” button
To control the inner light turn on/off .

3.LED display window
Display temperature for zone.

4.indicator light
Compressor in operation display.

5.“ + ” button
To set the temperature of the chamber.
(Press once the button, the temperature will increase 1°C.)

6.“ — ” button
To set the temperature of the chamber.
(Press once the button, the temperature will decrease 1°C.)

Setting the Temperature Control

Each cooling compartment of the wine cooler is independently controlled. To set the temperature:

• When pressing + or — button, the system will be entering the set up mode in the compartment automatically. The LED will flashing and display the setting temperature.

• Each press on the + button, the temperature setting of the zone will increase by 1°C.

Each press on the — button, the temperature setting of the zone will decrease by 1℃.

Press once the button, the temperature will increase or decrease 1°C. After stopping pressing the button for 5 seconds, LED figure will stop flash, then exit setting model.

The temperature setting can be adjusted from 6°C to 18°C.

If you want to know the actual temperature , please press + or — for 3 seconds, display panel will show actual temperature. After 5 seconds, it will show the set temperature.

This appliance memorizes and saves its set temperature. In case of a power outage, the unit adjusts to its previous temperature setting when power resumes.
press the + and — button for 3 seconds at the same time to switch Celsius/Fahrenheit.

Internal light

• In order to reduce energy consumption, this wine cabinet will automatically switch off the LED lights after 10 minutes.

• If you want the LED light to remain on continuously, this is possible. Please press and hold the "☼" button for 5 seconds, the display will show "LP".After 4 seconds the display will revert back to normal and the light will remain on until manually switched off.

• If you want to revert back and conserve energy (recommended), please press and hold the "☼" button for 5 second, the display will show "LF",after 4 seconds the display will revert back to normal, and the light will automatically switch off after 10 minutes.

WINE SERVING TEMPERATURE CHART

IMPORTANT INFORMATION ABOUT TEMPERATURE

Not all wines will improve over the years. Some should be

DEFROSTING/CONDENSATION/ HYGROMETRY/ VENTILATION

the compressor and evaporates any on that has collected

ses.

recycled.

and the hollow shelves.

ADJUSTABLE WOODEN SHELVES:

rail

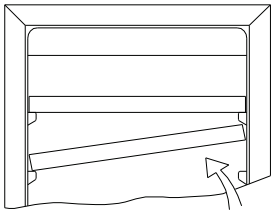


Fig.1

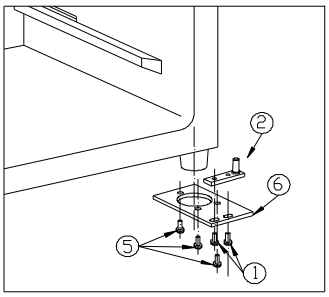


Fig.2

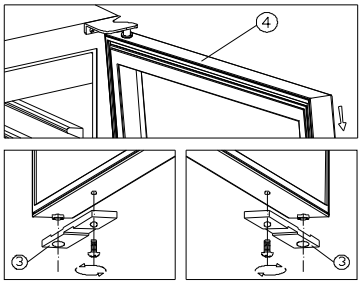


Fig.4


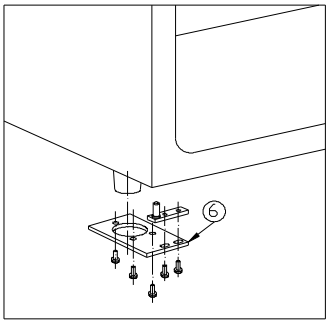


Fig.3

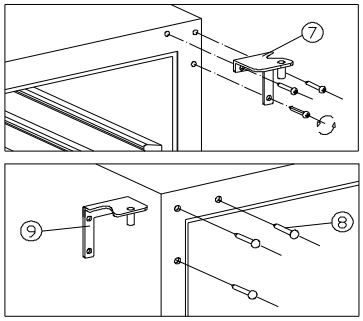

1. Screws	2 . Door axis	3 . Door limit device
4. Door	5. Hinge Screws	6. Lower hinge
7.Top hinge(Right)	8.Hole cover	9.Top hinge(Left)

1. Open the door to a 90 degree angle, take out the 2 screws (1) from door axis (2), remove the door (4), Remove the Door axis (2) (Fig. 1& Fig.2).

2. Unscrew the screw located underneath the door frame and the limit device (3), and re locate it at left end side of the door frame. (Fig. 2)

3. Take out the 3 hinge screws from the top hinge (right) (7)and remove it. (Fig. 3)

4. Remove decorative nail (8) from left top of cabinet and install spare top hinge (Left) (9) at left top of cabinet with 3 screws. (Fig. 3)

5. Overturned the lower hinge(6). Install the lower hinge at left lower of the cabinet with 3 screws(5).(Fig.4)

6. The door axis(2) revolves 180 degree, Put it into the door axis hole of the door. (Fig.4)

7. Install and aligned the door. Screw down the 2 screws(1). (Fig.4)

8. Insert the plastic caps to cover the holes(8).

How to replace the charcoal filter

Fig. A


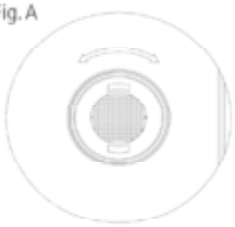


Fig. B



Fig. C

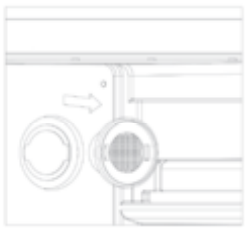

1. Open the door and remove the top 1 shelve (see removing the shelves).

2. Turn the filter as per Fig A.

3. As per Fig B, the filter should line up with the notches as shown.

4. Pull filter out (Fig C).

5. Insert replacement filter and twist as per Fig A to lock into position.

6. Re-install the shelves.

NOTE:

The charcoal filter should be replaced every 3-6 months depending on the unit's exposure level to odour.
www.shop.vintecclub.com

OPERATION ANOMALIES

[illegible] electrician.

sed technician by Vintec will lead to the warranty bei-

POWER FAILURES

power resumes.

to protect your wine.

abnormal temperature or humidity levels inside your

wines.

[illegible]	[illegible]
[illegible] does not operate.	[illegible]
[illegible]	[illegible] The door is not closed completely.
[illegible]	[illegible] normal. [illegible] The door is not closed completely. The temperature control is not set correctly.
[illegible]	[illegible]
[illegible]	[illegible]

The Wine Cellar seems to make too much noise.	A Gurgling noise may come from the low side of the refrigerant system, which is normal as each cycle ends in your Wine Cellar. Contraction and expansion of the inside walls may cause popping and crackling noises. The Wine Cellar is not level.
The door will not close properly.	The Wine Cellar is not level. The door was reversed and not properly installed. The gasket is faulty. (Magnet or rubber is spoiled). The shelves are out of position.
Condensation or droplets on exterior surfaces, glass door, sealing gasket strip. This is a natural phenomenon	Wipe off any condensation or droplets with soft dry cloth. Place appliance in a lower humidity area. Try adjusting temperature to be slightly warmer above the coldest temperature setting or wait until humidity back to at lower levels (recommended place appliance at max or lower than 75% relative air humidity area)

Technical Data:

Models		VWS830FCB-X	VWS830FAS-X
Capacity	750ml bordeaux Bottles	35	35
	375ml Beer Bottles	-	-
Gas charge(g)		30g	30g
Net capacity		125L	125L
Preset Temperature (°C)		12°C	12°C
Adjustable tmep in degrees		6 to 18 °C	6 to 18 °C
Heater [1]		-	-
Freestanding or Solt-in		Freestanding	Freestanding
Number of shelves: [1]		3	3
Dimensions (mm) (WxDxH)		493x577x832	493x577x832
Packaged Dimensions (mm) (WxDxH)		555x650x870	555x650x870
Net weight		36kg	32kg
Gross weight		40kg	36kg

1. Models with a heater will raise their temperature to the set temperature if the ambient temperature is below the set temperature. Models without a heater will not raise the temperature to the set temperature in these conditions.

If the refrigerant of these appliances are R600a , Flammable and explosive articles should not be put in or near the cabinet, to avoid the fire or explode caused.



Caution:Flammable materials
Risk of Fire

The symbols you will see in this booklet have these meanings:

WARNING

This symbol indicates information concerning your personal safety.

CAUTION

This symbol indicates information on how to avoid damaging the refrigerator.

IMPORTANT

This symbol indicates tips and information about use of the refrigerator.

ENVIRONMENT

This symbol indicates tips and information about economical and ecological use of the refrigerator.

Conditions of use

This refrigerator is designed and intended to be used in normal domestic applications only.

Ambient Room Temperature Limits

This appliance is designed to operate in ambient temperatures specified by its temperature class marked on the rating plate.

Class	Symbol	Ambient Temperatures range(°C)	Humidity
Extended Temperate	SN	10 to 32	75%
Temperate	N	16 to 32	
Subtropical	ST	16 to 38	
Tropical	T	16 to 43	

In environments with higher humidity levels, condensate droplets may appear on the appliance's exterior door surfaces.
If condensate droplets occur, here are some suggesons to address the issue:

- **Ensure adequate ventilation around the appliance to reduce humidity levels.**
- **Wipe and clean the surfaces to prevent any build-up of moisture and condensation.**
- **If the appliance setings are too cold, try adjusting them to be warmer to minimize condensation.**
- **Consider to move or relocate the appliance to a location with lower humidity levels.**
- **Use dehumidifiers in the room to lower overall humidity, if possible.**

Electrolux Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND
APPLIANCE: VINTEC

This document sets out the terms and conditions of the product warranties for Vintec Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should there be a manufacturing defect in your Appliance. This warranty is in addition to other rights you may have under the Australian Consumer Law.

1. **In this warranty:**
   (a) 'ACL' or 'Australian Consumer Law' means Schedule 2 to the Competition and Consumer Act 2010;
   (b) 'Appliance' means any Electrolux product purchased by you and accompanied by this document;
   (c) 'ASC' means Electrolux's authorised serviced centres;
   (d) 'Vintec' is the brand controlled by Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively "Electrolux") of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;
   (e) [illegible] warranty;
   (f) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
2. **Application:** This warranty only applies to new Appliances, purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Appliances or services relate, including any non-excludable statutory guarantees in Australia and New Zealand.
3. **Warranty Period:** Subject to these terms and conditions, this warranty continues for in Australia for a period of 24 months and in New Zealand for a period of 24 months, following the date of original purchase of the Appliance.
4. **Repair or replace warranty:** During the Warranty Period, Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux may, in its absolute discretion, choose whether the remedy [illegible] ASC may use refurbished parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux.
5. **Travel and transportation costs:** Subject to clause 7, Electrolux will bear the reasonable cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. Travel and transportation will be arranged by Electrolux as part of any valid warranty claim.
6. **Proof of purchase** is required before you can make a claim under this warranty.
7. **Exclusions:** You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:
   [illegible]
   (b) parts and Appliances not supplied by Electrolux;
   [illegible] Appliance;
   (d) damage to the Appliance caused by:
      (i) negligence or accident;
      (ii) misuse or abuse, including failure to properly maintain or service;
      (iii) improper, negligent or faulty servicing or repair works done by anyone other than an Electrolux authorised repairer or ASC;
      (iv) normal wear and tear;
      (v) power surges, electrical storm damage or incorrect power supply;
      (vi) incomplete or improper installation;
      (vii) incorrect, improper or inappropriate operation;
      (viii) insect or vermin infestation;
      (ix) failure to comply with any additional instructions supplied with the Appliance;

   In addition, Electrolux is not liable under this warranty if:
   (a) the Appliance has been, or Electrolux reasonably believes that the Appliance has been, used for purposes other than those for which the Appliance was intended, including where the Appliance has been used for any non-domestic purpose;
   [illegible]
   (c) the Appliance's serial number or warranty seal has been removed or defaced.
8. **How to claim under this warranty:** To enquire about claiming under this warranty, please follow these steps:
   (a) carefully check the operating instructions, user manual and the terms of this warranty;
   (b) have the model and serial number of the Appliance available;
   (c) have the proof of purchase (e.g. an invoice) available;
   (d) telephone the numbers shown below.
9. **Australia:** For Appliances and services provided by Electrolux in Australia: Electrolux goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the ACL.
10. **New Zealand:** For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.
    [illegible] You accept that if you make a warranty claim, Electrolux and its agents including ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Important Notice
Before calling for service, please ensure that the steps listed in clause 8 above have been followed.

AUSTRALIA	**FOR SERVICE** [illegible] authorised service centre in Australia **PLEASE CALL 1800 666 778** For the cost of a local call	**FOR ACCESSORIES** **PLEASE CALL 1800 666 778** For the cost of a local call (Australia only) or visit www.vintecclub.com
NEW ZEALAND	**FOR SERVICE** [illegible] authorised service centre in New Zealand **PLEASE CALL 0800 10 66 10**	**FOR ACCESSORIES** **PLEASE CALL 0800 550 020** (New Zealand only) or visit www.vintecclub.com

VINTEC

Service and support

In the rare event that your Vintec cabinet does not perform to your satisfaction, contact our dedicated support team:

1800 666 778

customercare@vintec.com.au

Vintec. We are part of the Electrolux Family. To add a touch of professional inspiration to your home, visit electrolux.com.au

Stay in touch and share your user experience by following us:

@vintecclub

© 2019 Electrolux Home Products Pty Ltd. ABN 51 004 762 341
Rev00_Sep 2024

vintec.com